


FeltOMatic

Built By

Maranatha

Machine & Model, Inc.
11789 Augusta Drive
Galesburg, MI 49053
269-665-6328

- 1) Position the FeltOMatic where it is easily accessible. The FeltOMatic can be mounted with the rolls either vertical or horizontal. Use the holes in the control box mounting flanges to attach the FeltOMatic where it is to be used.
- 2) Remove the feed roll cover (2 thumbwheels) and install the roll of felt. Replace the cover. NOTE: The standard FeltOMatic will accept a roll of felt with a core diameter of 3 inches and an outside diameter up to 12 inches. A custom FeltOMatic can be ordered for other sizes.
- 3) Remove felt from about 10 inches of the backing and thread the backing through the FeltOMatic as shown in the diagram below. The screws holding the pressure roller will need to be loosened to allow the backing to go between the roller and the peeler wheel. Wrap the backing partially around the take up roll and secure it with a small piece of tape. Adjust the pressure roller so it applies a light pressure on the peeler wheel and tighten the screws.

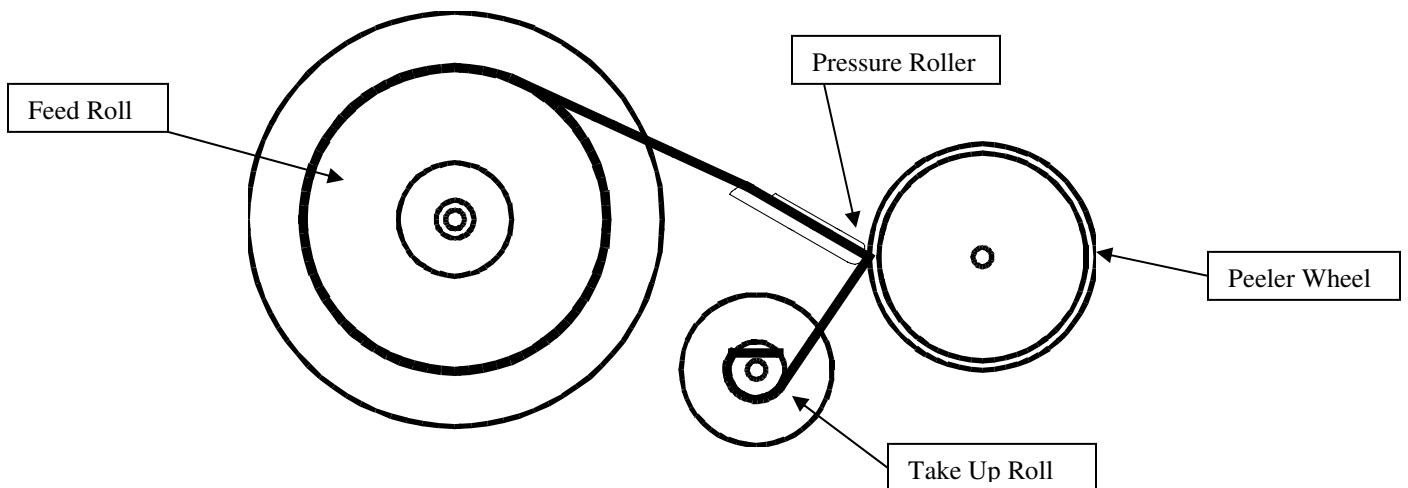

- 4) Plug the power cord into an outlet and press the joystick switch to cycle the FeltOMatic. The felt backing will be rolled onto the take up roll and the peeler wheel will strip the felt pieces off the backing. The peeler wheel will rotate 90, 120 or 180 degrees, depending on how it is set up and then stop until the switch is pressed again. The rotation angle can be changed by removing or adding set screws on the back side of the peeler wheel.